




DB2-B758

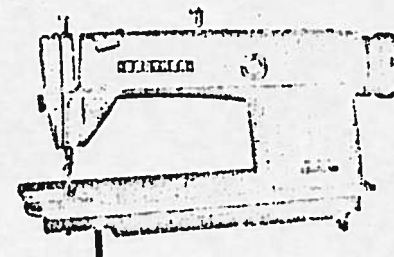

I 7110008

DB2-B758

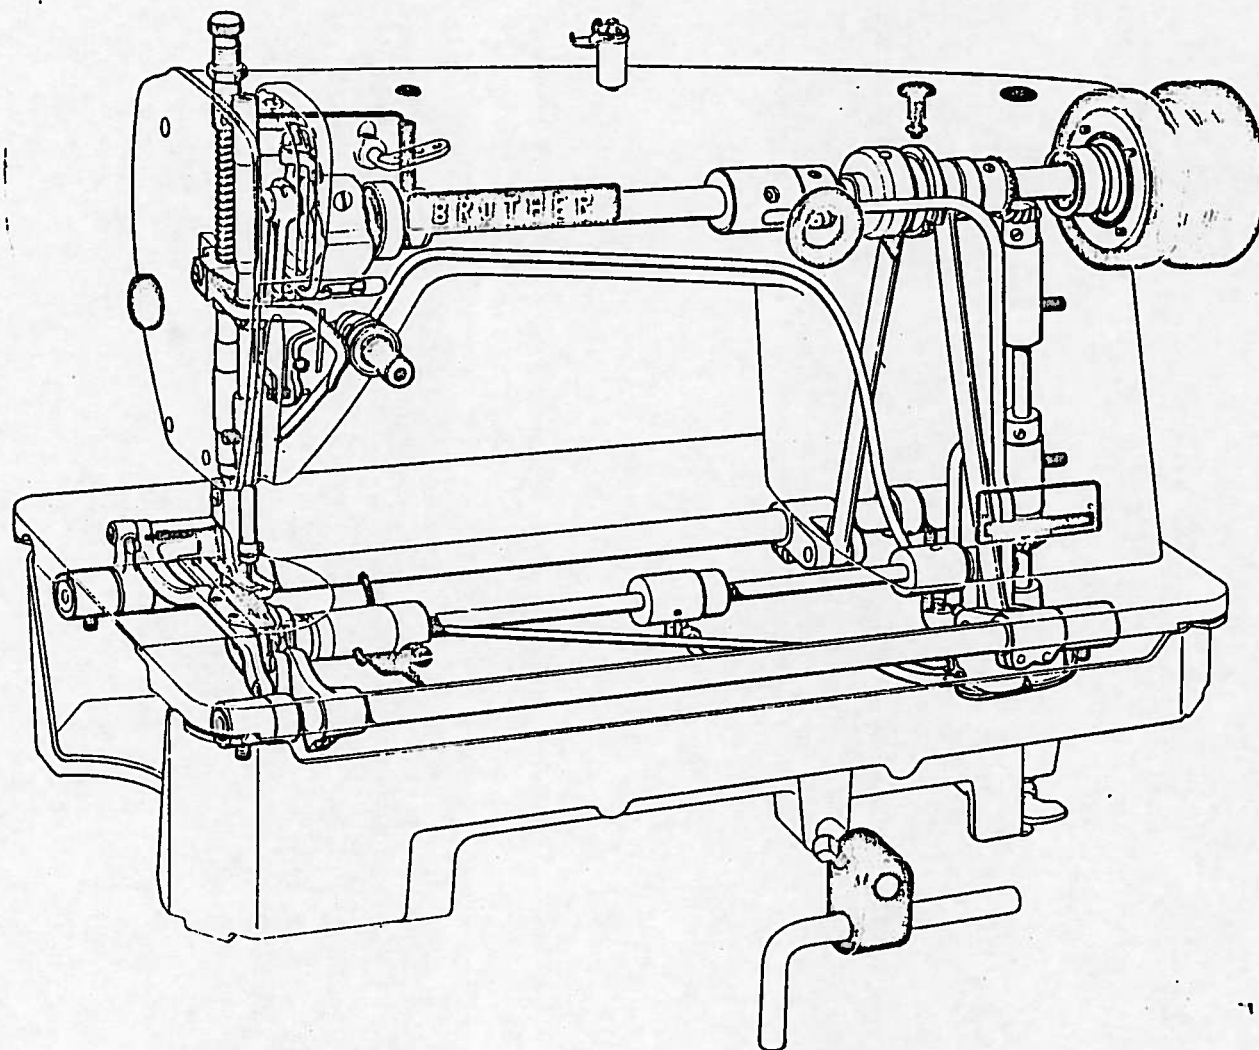


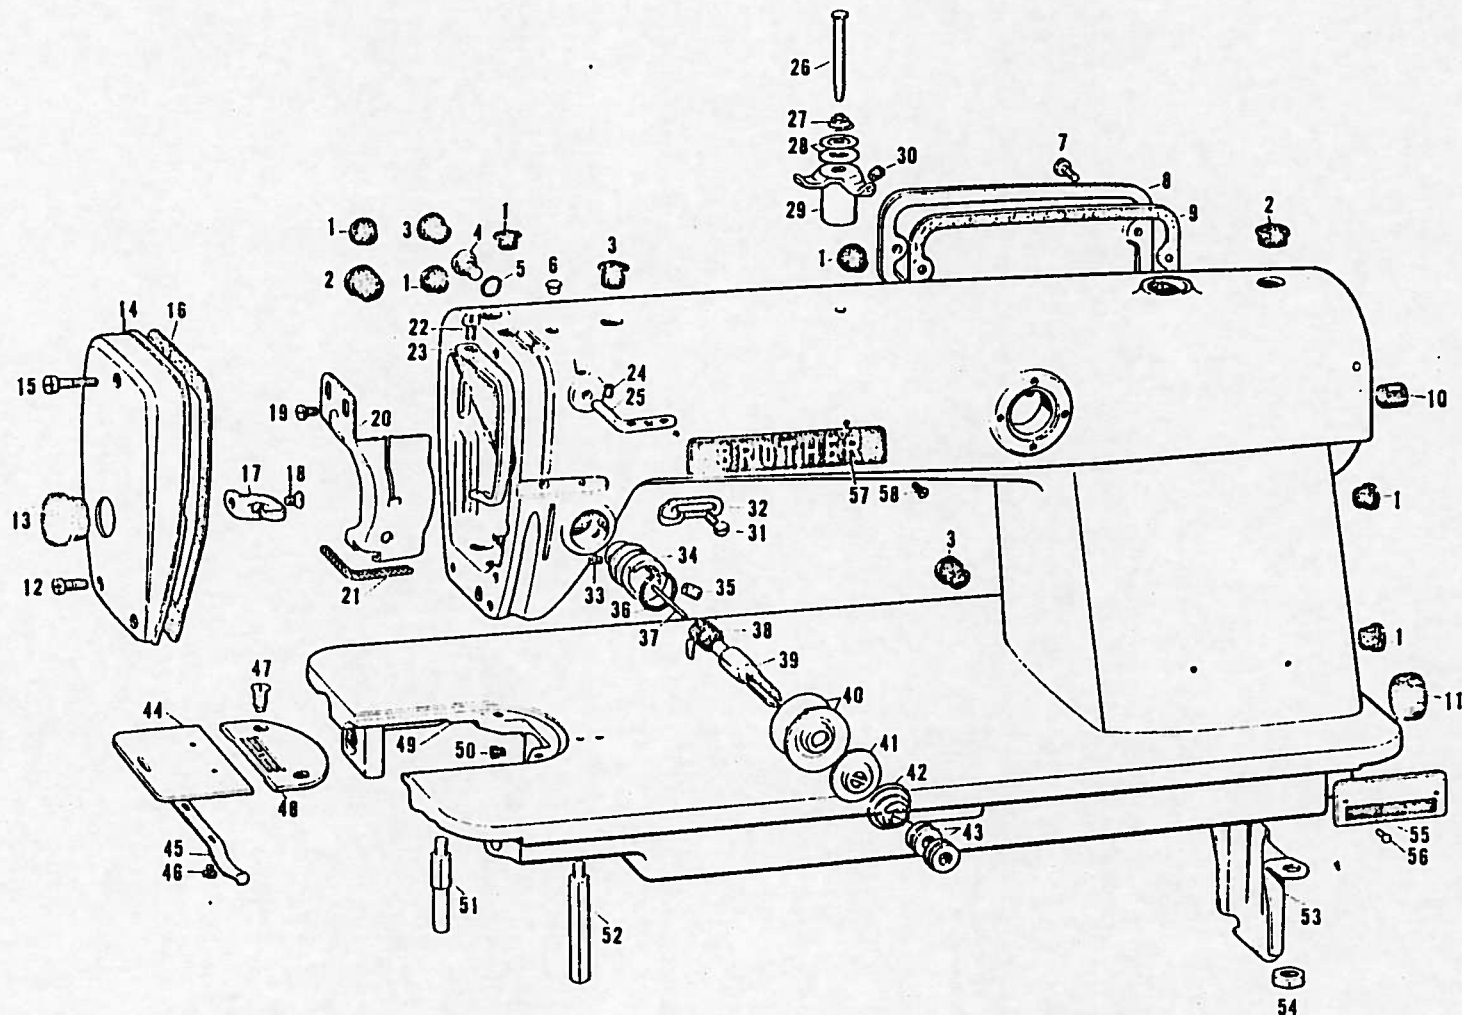


MODEL DB2-B758

DB2 B758 2

Ref. No.	Name of Parts	Q'ty	Parts No.	Assembly No.	Ref. No.	Name of Parts	Q'ty	Parts No.	Assembly No.
A-1	Oil cap for hole of B-3, B-19, B-21, B-74, and B-78	6	101450-0-01		A-39	Tension stud	1	116922-0-01	
A-2	Oil cap for hole of B41, B59	2	104149-0-01		A-40	Tension disc	2	108721-0-01	
A-3	Oil cap for hole of A-4, B-76, E-1	3	104821-0-01		A-41	Tension disc washer	1	100134-0-01	
A-4	Cap screw on arm for oil hole of B-2	1	106428-0-01		A-42	Tension spring	1	104525-0-01	
A-5	Packing PW5 for A-4	1	081005-6-70		A-43	Tension control nut	1	100136-0-01	
A-6	Oil cap	1	111865-0-01		A-44	Slide plate	1	100268-0-01	
A-7	Fastening screw for A-8	1	100137-0-02		A-45	Slide plate spring	1	114561-0-01	
A-8	Rear cover (SPOTTY BLUE COLER)	1	111456-0-02		A-46	Fastening screw for A-44	2	100035-0-01	
A-8	Rear cover (SPOTTY OLIVE COLER)	1	111456-0-01		A-47	Flat head screw for A-48	2	100032-0-01	
A-9	Packing for rear cover A-8	1	111457-0-01		A-48	Needle plate (B) for DB2-B758-3	1	111859-0-01	
A-10	Oil cap at inside of pulley	1	104832-0-01		A-48	Needle plate (C) for DB2-B758-1	1	117212-0-01	
A-11	Oil cap at pulley side of bed	1	108520-0-01		A-49	Arm bed	1	116722-0-01	
A-12	Fastening screw for A-14	1	100287-0-04		A-50	Oil cap bed near rotary hook	1	104833-0-01	
A-13	Oil cap for face plate	1	112782-0-01		A-51	Bed leg B	1	104830-0-01	
A-14	Face plate (SPOTTY BLUE COLER)	1	111455-0-02		A-52	Bed leg A	1	104829-0-01	
A-14	Face plate (SPOTTY OLIVE COLER)	1	111455-0-01		A-53	Pump cover	1	108181-0-03	
A-15	Fastening screw for A-14	1	107385-0-01		A-54	Nut for pump cover	1	100090-0-03	
A-16	Packing for A-14	1	109195-0-01		A-55	Model plate for DB2-B758-3	1	116921-0-01	
A-17	Face plate thread guide	1	111476-0-01		A-55	Model plate for DB2-B758-1	1	116726-0-01	
A-18	Fastening screw for A-17	1	108960-0-03		A-56	Model plate pin	2	116231-0-01	
A-19	Fastening screw for A-20	2	100242-0-04		A-57	"BROTHER" nameplate	1	112547-0-01	
A-20	Oil stopper plate for thread take-up link	1	111478-0-01		A-58	Flat head screw for A-57	2	100191-0-03	
A-21	4 x 4 Wick	1	109405-0-01						
A-22	Fastening screw for A-23	1	100541-0-01						
A-23	Thread take-up cover (SPOTTY BLUE COLER)	1	116816-0-02						
A-23	Thread take-up cover (SPOTTY OLIVE COLER)	1	116816-0-01						
A-24	Set screw for A-25	1	100388-0-03						
A-25	Thread retainer	1	114931-0-01						
A-26	Pre-tension stud	1	112939-0-01						
A-27	Pre-tension spring	1	100548-0-01						
A-28	Pre-tension disc	2	100546-0-01	112937-0-01					
A-29	Pre-tension	1	112938-0-01						
A-30	Set screw	1	100218-0-02						
A-31	Fastening screw for A-32	1	100257-0-07						
A-32	Arm thread guide	1	113316-0-01						
A-33	Fastening screw for A-39	1	100402-0-02						
A-34	Upper thread tension bracket	1	111854-0-01						
A-35	Set screw for A-34	1	100062-0-04						
A-36	Packing for A-34	1	114294-0-01						
A-37	Tension release pin	1	100400-0-00						
A-38	Thread take-up spring	1	100399-0-01						

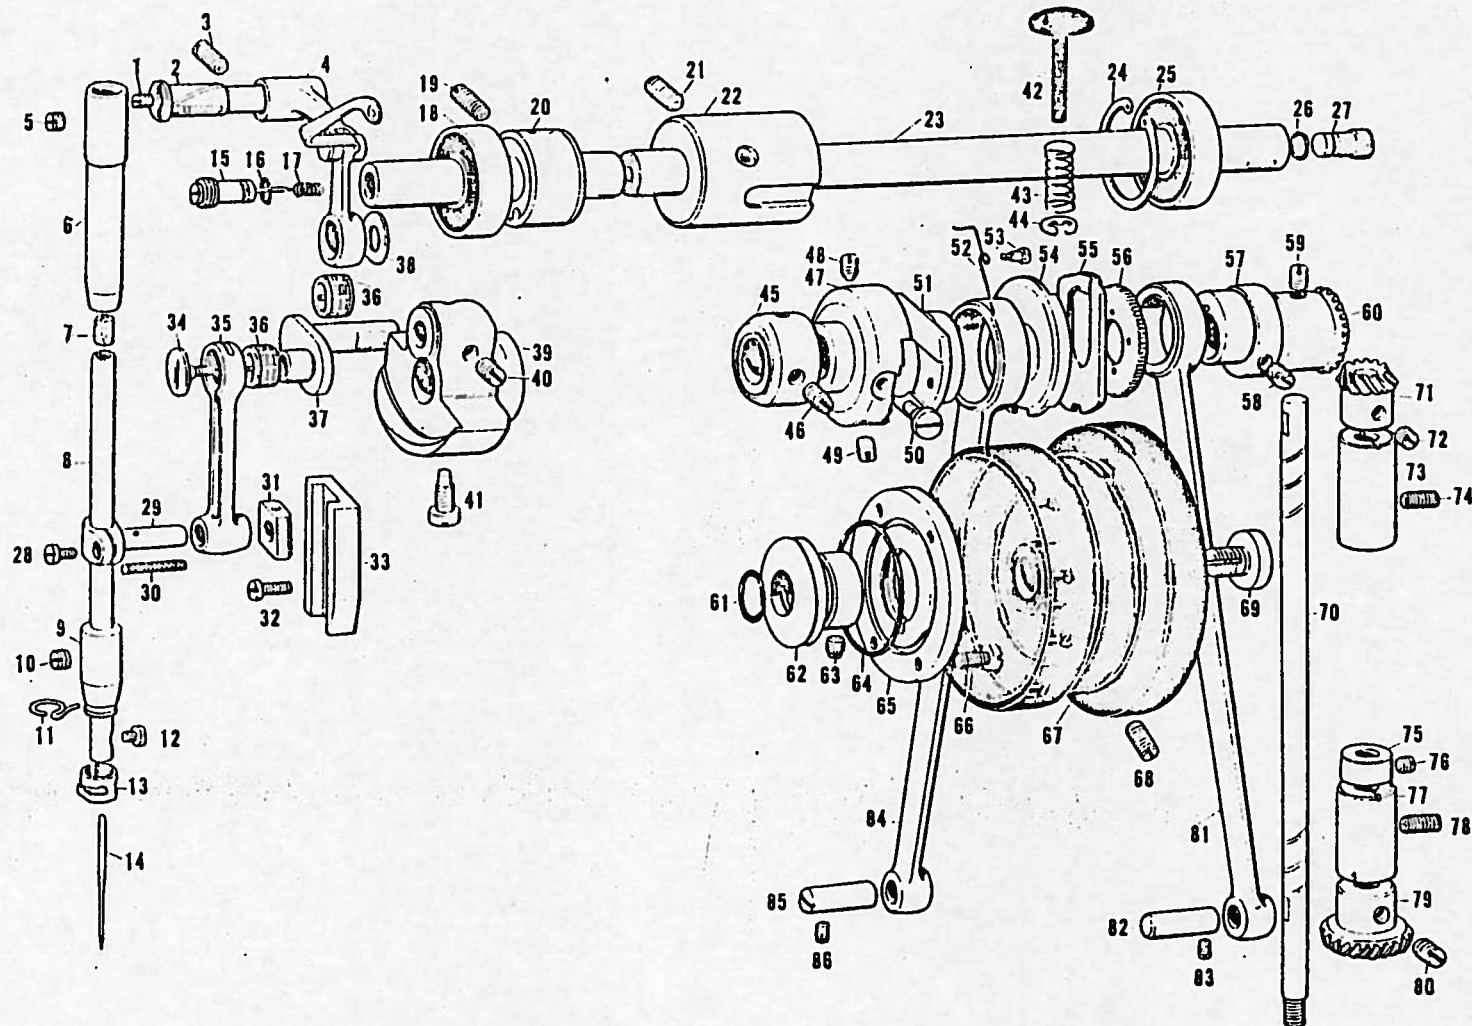

Ref. No.	Name of Parts	Q'ty	Parts No.	Assembly No.	Ref. No.	Name of Parts	Q'ty	Parts No.	Assembly No.
B-1	Cap screw for oil hole of B-2	1 pce.	104651 0 01	182342-0-01	B-45	Upper shaft collar	1 pce.	101486 0-01	117181-0-01
B-3	Set screw for B-2	1 "	100016-0-03		B-46	Set screw for B-45	2 pcs.	100013-0-03	
B-5	Set screw for B-6	1 "	100260-0-01		B-47	Eccentric wheel clamp	1 pce.	116754-0-01	
B-6	Needle bar bushing upper	1 "	117242-0-01		B-48	Set screw for B-47	1 "	103950 0-01	
B-7	Needle bar cork	1 "	111863-0-01		B-49	Set screw for B-47	2 pcs.	100013-0-03	
B-8	Needle bar	1 "	117246 0-01		B-50	Eccentric wheel stopper stud screw	1 pce.	116755-0-01	
B-9	Needle bar bushing lower	1 "	117243-0-01		B-51	Eccentric wheel	1 "	116753-0-01	
B-10	Set screw for B-9	1 "	100260-0-01		B-52	Spring for ratchet stopper	1 "	116759 0-01	
B-11	Thread guide for B-9	1 "	100573 0-01		B-53	Set screw for B-52	1 "	116760-0-01	
B-12	Set screw for B-14	1 "	100130-0-01		B-54	Eccentric feed control cam	1 "	116756-0-01	
B-13	Needle bar thread guide	1 "	112775 0-01		B-55	Ratchet stopper	1 "	116757-0-01	
B-14	Needle DB X1 for D112-B758-3	1 "	100265-0-36		B-56	Eccentric wheel ratchet	1 "	116758 0-01	
B-14	Needle DB X1 for DB2-B758-1	1 "	100575-0-31		B-57	Vertical feed eccentric cam	1 "	116862 0-01	180022-0-01
B-15	Oil screw left for upper shaft	1 "	116787-0-01	116732-0-01	B-58	Set screw for B-57	2 pcs.	100013-0-03	
B-16	Packing for B-15	1 "	081002-0-70		B-59	Set screw for B-60	2 "	100251-0-01	
B-17	Spring for B-15	1 "	116799-0-01		B-60	Upper shaft gear	1 pce.	103552-0-01	
B-18	Ball bearing left for upper shaft	1 "	116933-0-00		B-71	Vertical shaft upper gear	1 "	104511-0-01	
B-19	Set screw for B-20	1 "	100016-0-03		B-72	Set screw for B-71	2 pcs.	101706-0-01	
B-20	Upper shaft bushing left	1 "	111459-0-00		B-61	Packing for B-62	1 pce.	116789-0-01	
B-21	Set screw for B-22	1 "	100016-0-03		B-62	Oil rejector for upper shaft	1 "	117062-0-01	
B-22	Upper shaft bushing intermediate	1 "	104836 0-00		B-63	Set screw for B-62	2 pcs.	100058 0-03	
B-23	Upper shaft	1 "	116727-0-01		B-64	Packing for B-65	1 pce.	116791-0-01	
B-24	Stop ring for B-25	1 "	048350-2-42		B-65	Cap for B-62	1 "	116790-0-01	
B-25	Ball bearing right for upper shaft	1 "	116934-0-01		B-66	Set screw for B-65	4 pcs.	100368-0-02	
B-26	Packing for B-27	1 "	081002-6-70		B-67	Arm pulley	1 pce.	116736-0-01	
B-27	Oil screw right for upper shaft	1 "	104555-0-00		B-68	Set screw for B-67	2 pcs.	100016-0-03	180023-0-01
B-31	Needle bar guide slide block	1 "	102630 0-01	116732-0-01	B-69	Cap screw for arm pulley	1 pce.	104478 0-01	
B-32	Set screw for B-33	1 "	100137-0-01		B-70	Vertical shaft	1 "	109159-0-01	
B-33	Needle bar guide	1 "	102631-0-01		B-73	Vertical shaft upper bushing	1 "	117241-0-01	
B-2	Stud for thread take-up supporter	1 "	111468 0-01		B-74	Set screw for B-73	1 "	100016 0-03	
B-4	Thread take-up lever	1 "	116734-0-01		B-75	Set collar for B-77	1 "	104521 0-01	
B-28	Set screw for B-29	1 "	100257-0-06		B-76	Set screw for B-75	2 pcs.	101706-0-01	
B-29	Needle bar connecting stud	1 "	111237-0-01		B-77	Vertical shaft lower bushing	1 pce.	117245-0-01	
B-30	Wick for B-29	1 "	108809-0-01		B-78	Set screw for B-77	1 "	100016 0-03	
B-31	Cap screw for needle bar crank	1 "	103001-0-01		B-79	Vertical shaft lower gear	1 "	104515-0-01	
B-35	Needle bar crank rod	1 "	111236-0-01		B-80	Set screw for B-79	2 pcs.	100251-0-01	
B-36	Needle roller with retainer	2 pcs.	116735-0-01		C-21	Lower shaft gear	1 pce.	104516-0-01	
B-37	Needle bar crank	1 pce.	116733-0-01		C-22	Set screw for C-21	2 pcs.	100251-0-01	
B-38	Needle bar crank washer	1 "	110367-0-01		B-81	Vertical feed connecting rod	1 pce.	116763-0-01	
B-39	Counter weight	1 "	116731-0-01		B-82	Stud for B-81	1 "	109153-0-01	
B-40	Set screw for B-37	2 pcs.	100251-0-01		B-83	Set screw for B-82	1 "	100388-0-03	
B-41	Set screw for B-39	1 pce.	104464-0-01		B-84	Horizontal feed crank	1 "	116761-0-01	
B-42	Feed control button	1 "	116764-0-01		B-85	Horizontal feed crank stud	1 "	109153-0-01	
B-43	Spring for B-42	1 "	116765-0-01		B-86	Set screw for B-85	1 "	100388-0-03	
B-44	Stop ring	1 "	048040-3-42						

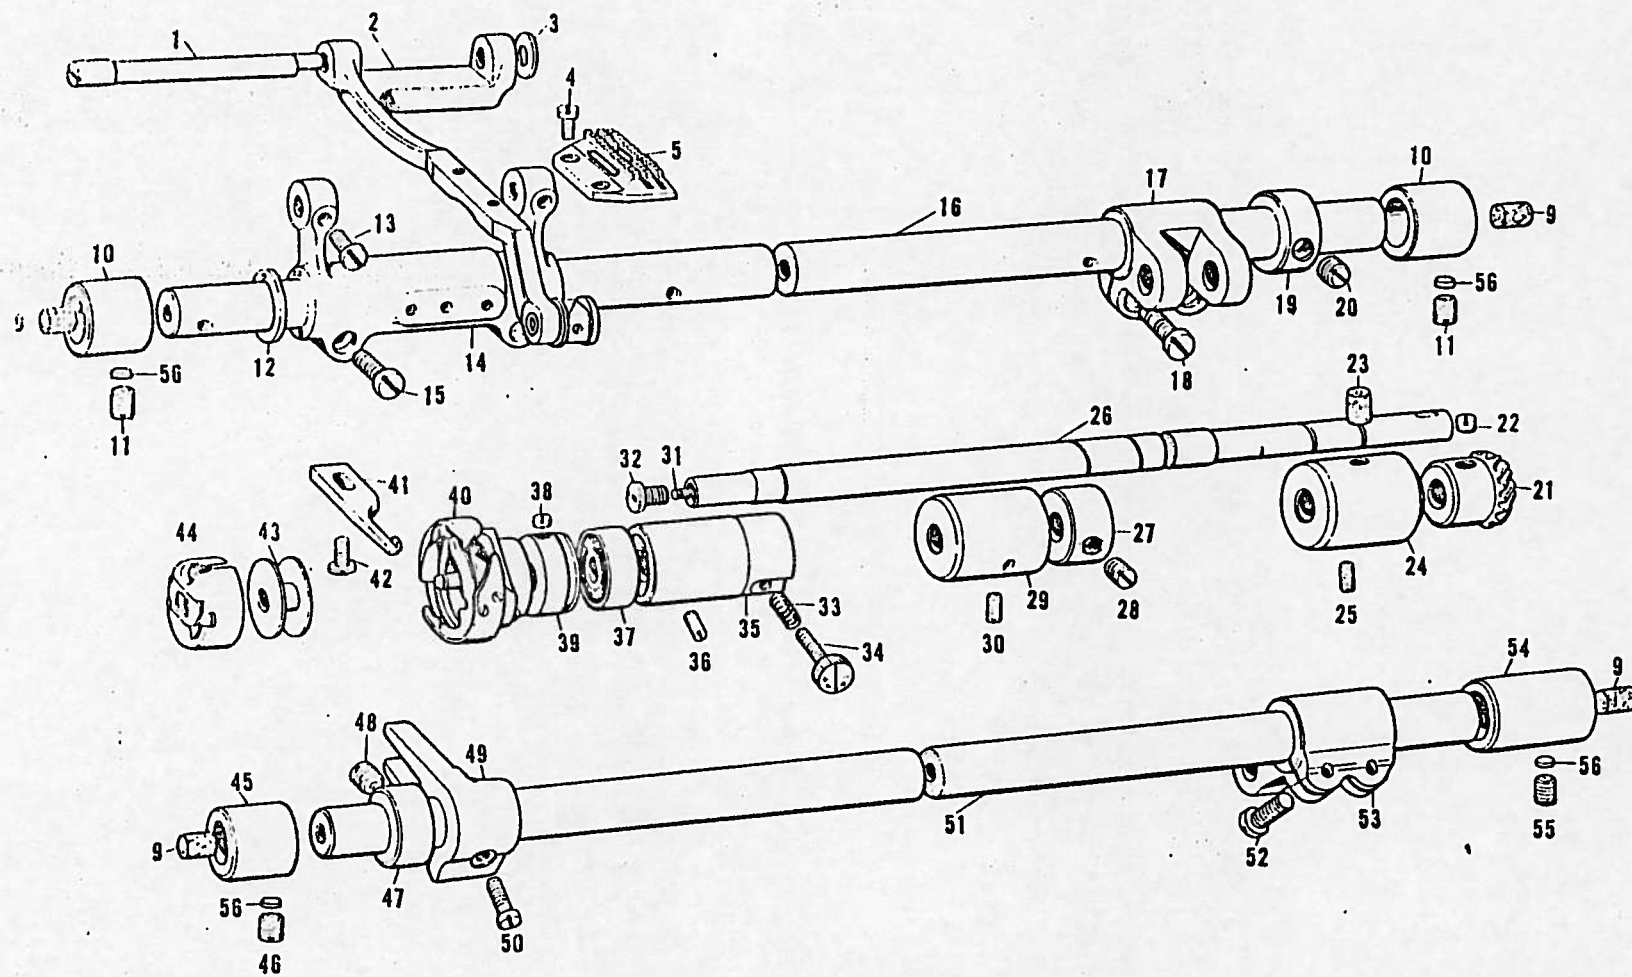

Ref. No.	Name of Parts	Q'ty	Parts No.	Assembly No.	Ref. No.	Name of Parts	Q'ty	Parts No.	Assembly No.
C-1	Feed bar shaft	1 pce.	116917-0-01		C-51	Vertical feed shaft	1 pce.	116926-0-01	
C-2	Feed bar assembly	1 "	118213-0-01		C-52	Fastening screw for C-53	2 pcs.	100086-0-03	
C-3	Spring washer for C-1	1 "	115663-0-01		C-53	Vertical feed rock shaft	1 pce.	116768-0-01	
C-4	Fastening screw for C-5	2 pcs.	100080-0-03		C-54	Vertical feed shaft bushing, right	1 "	116919-0-01	
C-5	Feed dog	1 pce.	111860-0-01		C-55	Set screw for C-54	1 "	100251-0-01	
C-9	6 ϕ $\times$ 7 felt	4 pcs.	107155-0-01		C-56	Washer for C-46, C-55	2 pcs.	107793-0-00	
C-10	Horizontal feed shaft collar	2 "	116766-0-01						
C-11	Set screw for C-10	2 "	101706-0-01						
C-12	Set collar for C-14	1 pce.	116920-0-01						
C-13	Fastening screw for C-1	2 pcs.	100541-0-01						
C-14	Horizontal feed arm	1 pce.	116838-0-00						
C-15	Fastening screw for C-14	2 pcs.	100086-0-03						
C-16	Horizontal feed shaft	1 pce.	116837-0-01						
C-17	Feed rock shaft arm	1 "	117169-0-01						
C-18	Fastening screw for C-17	2 pcs.	100388-0-03						
C-19	Set collar for C-16	1 pce.	116918-0-01						
C-20	Set screw for C-19	2 pcs.	101706-0-01						
C-23	6 ϕ $\times$ 7 felt	1 pce.	107155-0-01						
C-24	Lower shaft bushing right	1 "	104520-0-00						
C-25	Set screw for C-24	1 "	104869-0-02						
C-26	Lower shaft	1 "	116775-0-01						
C-27	Lower shaft collar	1 "	116778-0-01						
C-28	Set screw for C-27	2 pcs.	100289-0-03						
C-29	Lower shaft bushing, middle	1 pce.	116777-0-00						
C-30	Set screw for C-29	1 "	104869-0-02						
C-31	Oil felt for C-26	1 "	106436-0-01						
C-32	Lower shaft oil cap screw	1 "	109173-0-01						
C-33	Spring for C-34	1 "	116794-0-01						
C-34	Oil flow adjusting screw	1 "	116793-0-01						
C-35	Lower shaft bushing, left	1 "	116776-0-00						
C-36	Set screw for C-35	1 "	104869-0-02						
C-37	Upper shaft ball bearing, left	1 "	072060-8-50						
C-38	Set screw for C-39	1 "	100388-0-04						
C-39	Oil rejector for C-26	1 "	116792-0-01						
C-40	Rotary hook assembly	1 "	116780-0-01						
C-41	Bobbin case holder position bracket	1 "	116781-0-01						
C-42	Fastening screw for C-41	1 "	107407-0-02						
C-43	Bobbin	1 "	116782-0-01						
C-44	Bobbin case assembly	1 "	100369-0-01						
C-45	Vertical feed shaft bushing, left	1 "	116766-0-01						
C-46	Set screw for C-45	1 "	101706-0-01						
C-47	Set collar for C-51	1 "	116918-0-01						
C-48	Set screw for C-47	2 pcs.	101706-0-01						
C-49	Feed lifting arm	1 pce.	180322-0-01						
C-50	Fastening screw for C-49	1 "	106127-0-02						